


KS0030E Electronic Key Safes USER INSTRUCTIONS

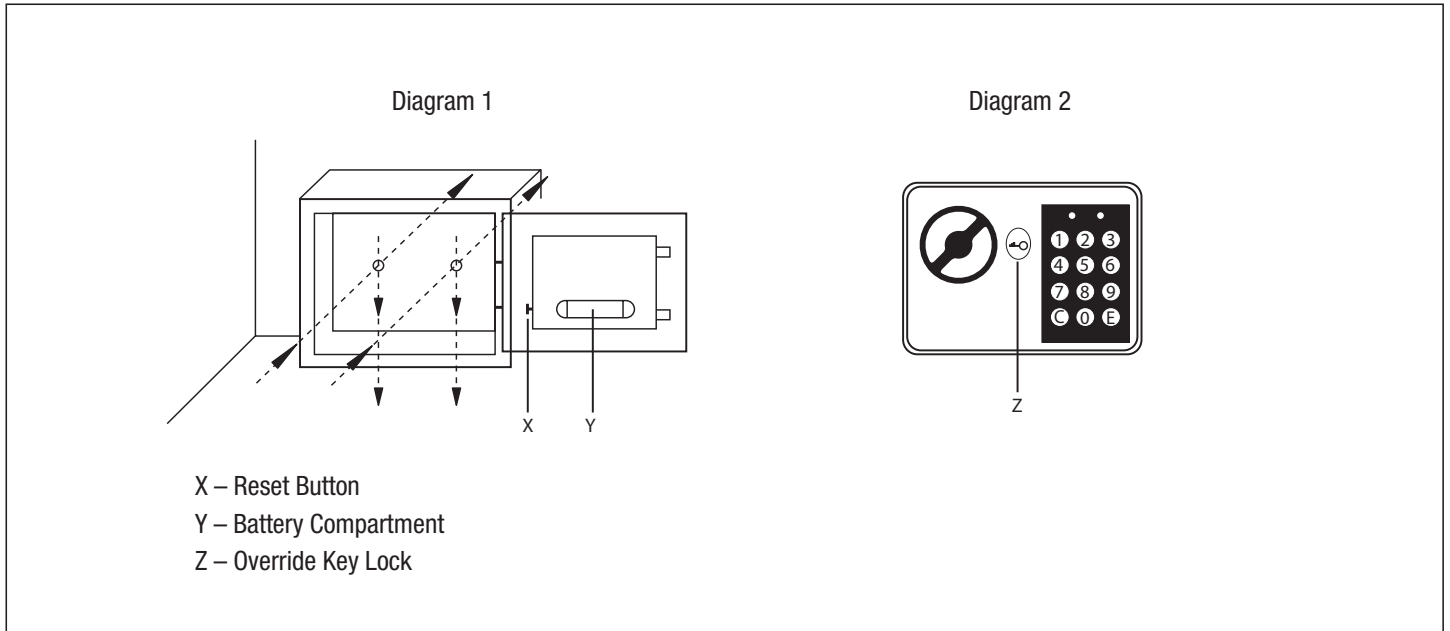

1. FIRST OPENING

Please remove blue oval cover from front keypad (Diagram 2 - Z), now insert key supplied and turn anti-clockwise, open the door by turning knob clockwise. With the door in open position insert the 4 x AA batteries supplied (Diagram 1-Y).

2. SETTING PERSONAL CODE

With the door in the open position. Press the red reset button (Diagram 1 -X) on the back of the door. Enter your personal code (It is recommended to use four numbers) and press button "E" to confirm. You will hear a bleep tone.

3. WARNING

Before closing the door check that the new codes are in operation. Enter your new personal code and press button "E" to confirm. You will hear a bleep tone. The safe is now ready for use.

4. OPENING YOUR SAFE

Enter your user code followed by button "E"

5. MANUAL OVERRIDE

Please remove blue oval cover from front keypad (Diagram 2 - Z), now insert key supplied and turn anti-clockwise, open the door by turning knob clockwise. With the door in open position insert the 4 x AA batteries supplied (Diagram 1-Y).

6. REPLACEMENT BATTERIES

When the batteries are low the red indicator light will be illuminated when the keypad buttons are pressed. The lock uses 4 x AA batteries located in the battery holder (Diagram 1 -Y).

Please replace these as soon as possible.

7. INSTALLATION

Use the two 6mm bolts to bolt the safe to a suitable floor or wall.