

INSTRUCTIONS




(Fig.1)

How to open

1. Remove the Dust Cover to reveal the Opening Lever, Push buttons and Clear Button. (Fig.1)
2. There is no pre-set combination, push the Clear Button and pull down the Opening Lever to open the Front Door.



(Fig.2)

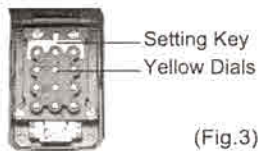

(Fig.3)



(Fig.4)



(Fig.5)

Setting your personal combination

1. Open the door by using the method above to reveal the setting dials on the back of the door. (Fig.2)
2. Remove the yellow setting key (to use like a screw driver). (Fig. 3)
3. Choose a combination and write it down prior to setting the lock. (Each button can be used once only)
4. Each yellow dials has a "On" and "Off" setting using a dial that can be rotated 180 degrees by using the setting key. (Fig.4)
5. Test the combination before closing the lid.
After setting, the "Opening Lever" cannot be pressed down due to be locked.

* Enter your combination to test the function.

1. Press down the "Clear Button", and then enter your combination.

2. Press down the "Open Button" and pull door close.

6. Return yellow setting key to original position for future use.

Wall Mounting:

Tools required: Pencil, spirit level, drill bit, drill, hammer and Pozi screwdriver.

1. Choose a mounting location. (We recommend a discrete location away from direct view).
2. Open the Dust Cover and lock door using your combination.
3. Position the lock in the desired position.
4. Use a spirit level to ensure the lock is mounted straight & vertical.
5. Mark the position of the screw holes on the desired surface.
6. Remove the lock and drill holes and fit wall plugs.
7. Insert and tighten screws.
8. Always use the front cover if mounted in an outdoor position.

NOTES:

1. You can change the combination at any time.
2. Keep Dust Cover closed to increase weather resistance and conceal the dials from view.